

QUICK REFERENCE GUIDE TO THE 3200 & 9600 PANELS

Arming Area You Are In:

Enter code then press on.

Arming From Another Area:

Press the numerical key representing the area number you want to disarm.

Press the [*] Button, then [ON/OFF]. In effect, you will now be in that area.

Enter your code, then press [ON/OFF]

Arming All Areas Simultaneously:

Press [9], [*], enter your code and press [ON/OFF]

Delay Autoarming: *15 min. prior to arming, the siren will sound a warning & the keypad will begin countdown

Enter code, then [Function]

Press [No] until you see “Arm in 1-4 Hours?”

Press [Yes]

Press [1] – [4]

**Autoarming may be cancelled completely by arming and disarming the panel

Disarming Area You Are In:

Enter code then press off.

Disarming From Another Area:

Press the numerical key representing the area number you want to disarm.

Press the [*] Button, then [ON/OFF]. In effect, you will now be in that area.

Enter your code, then press [ON/OFF]

Disarming All Areas Simultaneously:

Press [0], [*], enter your code and press [ON/OFF]

Silencing an Alarm:

If the alarm trips, you can silence the alarm by entering your code, press off, and then press reset to clear the display.

Bypassing a Zone:

Press the zone number that you want to bypass then “Bypass”.

*If a code is required for bypassing, you must enter your code, then “Bypass” then the zone number you want to bypass, then “Bypass”.

Un-bypassing a Zone:

Repeat the step for bypassing the zone.

Panic Button:

To sound the siren, press the * and 9 buttons at the same time.

Mistakes:

If you make a mistake entering your code, simply wait five seconds for the keypad to clear then re-enter your code.

SERVICE:

If you need service on your system you can call 1-800-570-6478.

AC POWER FAIL/E01-00 SERVICE

Power Failure - Is there a general power outage? If not:

Check power transformer (black square box plugged into outlet near panel)

Check for blown fuse or circuit breaker

LOW BATTERY/E02-00 SERVICE

Battery below 11 volts – Usually due to AC power failure or Alarm

Will automatically recharge after AC power restore

If not recharged within 24 hours, it needs to be replaced

WIRELESS LOWBATT/E05-NN SERVICE

Wireless transmitter low battery (NN = receiver number)

Remove the transmitter cover and replace battery

SYSTEM TROUBLE/E18-NN SERVICE

Key fob low battery (NN = key fob transmitter number)

Remove the key fob cover and replace battery

SYSTEM TROUBLE/E41-NN SERVICE

Trouble condition on a Fire Zone

Press [RESET] button to silence the sounder.

Correct the trouble, then press the [RESET] button again.

ANY OTHER MESSAGES: CALL 1-800-570-6478 FOR SERVICE