

Napco Gemini P1632 Basic Commands

Zones	32 hardwired or wireless	
Battery	12 volt rechargeable Gel-Cell inside main panel AC Transformer is 16-volts plugged in somewhere in house	
	Door/Window Sensors	1 3-Volt Lithium Model DL123A
	Glassbreaks	2 3-Volt Lithium Model DL123A
	Motions	2 3-Volt Lithium Model DL123A
	Keyfob	2 3-Volt Lithium Flat type (not sure of model)
	Remote Panic	2 Energizer 386 1.5-Volt Silver Oxide
	Smoke Detector	2 9-volt Alkaline
Wireless	Yes	
Downloadable	Yes	
Panic Buttons	Fire Panic	Press 7/F + *
	Medical Panic	Press 8/A + *
	Police Panic	Press 9/P + *
Arm Away	User Code + ON/OFF	(Armed light will turn ON) (Flashing P means Zone(s) are open)
Arm Stay	INTERIOR + User Code + ON/OFF	(Interior light will turn ON) (Flashing P means Zone(s) are open)
Arm Partitions (If Partitioned)	1. Press 1 or 2 for Partition 1 or 2 2. Press * + ON/OFF 3. Press User Code + ON/OFF to arm	(This move you to that partition) (User Code must have authority in partition)
Arm All (If Partitioned)	Press 9 + * + User Code + ON/OFF	(Arms all Partitions)
Instant Arm	User Code + ON/OFF + INSTANT	(Armed light will flash rapidly)
Quick Arm	Press ON/OFF	(If Enabled)
Disarm	User Code + ON/OFF (If Partitioned use 0 + * + User Code + ON/OFF)	(Press RESET to clear mistakes)
Silence Alarm	User Code + ON/OFF	
Reset Smoke	User Code + ON/OFF + RESET twice	
Bypass	BYPASS + Zone (01 to 32) or User Code + BYPASS + Zone (01 to 32)	(Bypassed zone will slowly flash)
Siren Test	User Code + Function Press INSTANT until 3 or "Bell Test" appears Press INTERIOR to sound siren for 2 seconds	
Set Time	System clock can only be set by installer or by downloading	
Door Chime	1. Enter User Code then press FUNCTION to enter Program Menu 2. If LED Keypad press INSTANT until 07 appears in display If LCD Keypad press INSTANT until "Activate Chime ?" 3. Press INTERIOR to Enable or Disable 4. Press RESET to exit	
Siren Test	1. Enter User Code then press FUNCTION to enter Program Menu 2. If LED Keypad press INSTANT until 03 appears in display If LCD Keypad press INSTANT until "Activate Bell Test?" appears 3. Press INTERIOR to enable and sound siren for 3 seconds 4. Press RESET to exit	
Phone Test	1. Enter User Code then press FUNCTION to enter Program Menu 2. If LED Keypad press INSTANT until 15 appears in display If LCD Keypad press INSTANT until "Activate Telephone Test?" appears 3. Press INTERIOR to enable Phone Test, if Fail a trouble "3" will appear 4. Press RESET to exit	
Sensor Test	Arm system and activate sensors (Wireless motions require no movement for 4 minutes prior to testing)	
	Keypad Function Menu (User Mode) To skip a function press INSTANT (No)	

To enter a function press INTERIOR (Yes) or ON/OFF
To scroll forward through press FUNCTION, to scroll backwards press BYPASS
To exit press RESET or wait 1 minute

LED Keypads

LCD Keypads

01	Display Zone Status?	(Displays open zones, press NEXT or PRIOR to scroll)
02	Display Zones Bypassed?	(Displays bypassed zones, press NEXT or PRIOR to scroll)
03	Activate Bell Test?	(Tests siren, press INTERIOR for 2 second test)
04	Display System Troubles?	(Displays 1 or 2 digit trouble code, see TROUBLE section)
05	Display Fire Alarms?	(Displays Fire Alarms, press NEXT or PRIOR to scroll)
06	Display Fire Troubles?	(Displays Fire Troubles, press NEXT or PRIOR to scroll)
07	Activate Chime?	(Turns Door Chime ON and OFF)
08	Activate Watch Mode?	(Enables Day Zones, arm then disarm to deactivate)
09	Reset System Trouble?	(Manually resets some troubles)
10		(Installers only, normally do not use)
11	Start Exit Time?	(Normally do not use)
12	Activate Fault Fine?	(Installers only, normally do not use)
13	Activate Locate?	(Installers only, normally do not use)
14	Activate EZM Zone Find?	(Installers only, normally do not use)
15	Activate Telephone Test?	(Sends test signal to central station)
16	Delay Arming 1 - 4 Hours?	(Normally do not use)
17	Activate Program?	(Enters User Programming from Keypad #1 only)
18	Activate Download?	(Begins download, normally do not use)
19	Relay Control?	(Turns ON or OFF Relays (light control etc))

To exit press RESET or wait 1 minute