

Alarm System Operation Model 1008E

To change the codes:

1. Hold down number 8 until it beeps
2. Enter your program code (6478) lights will flash and the keypad will beep
3. You have eight user codes which you can enter (users 1-8), select which code you're going to program by pressing the B key followed by the code # 1-8
4. Enter the 4 digit code you want to use (no 0's)
5. To enter another code repeat steps 3 & 4
6. To exit the program mode press the B (or 0) key three times

Example, programming user number 5's code as 1234

1. Hold down number 8 until it beeps
2. Enter 6478 (program code)
3. Press B 5 (user 5)
4. Enter 1234
5. Press B (or 0) three times

To erase a code, follow the steps above but do not enter in any code, simply exit out of the programming after selecting the user position.

To set alarm: Close all doors and wait for green light to remain on. Once it is on, enter your code. The Red "armed" light should come on. The system is now armed.

To Bypass a zone: Before arming the system press the B key followed by the zone number you wish to bypass 1-7. The bypass light should come on. To check which zones you've bypassed, just hold the number 2 button (display bypass) down and it will scroll through which zones you've bypassed.

To make the delay doors instant: After arming your system, press and hold the number 4 button until it beeps. The armed light should now be flickering.

To disarm the system: Enter your code. If you make a mistake and the system does not disarm, stop and wait for 5 seconds. After five seconds, enter your code again. If you attempt to enter your code again, immediately after you have made an entry error, the keypad will lock you out.

To shut off the siren for either burglary or fire: Enter your code (once for burglary, twice for fire). If your code does not work the first time because of an entry error, stop and wait for 5 seconds before entering the code again.

To Reset the alarm after a burglary or fire trip: Press and hold the number 9 key until it beeps.

NOTE: If you get a "P" on the keypad, just enter your code again. This will occur if you try to arm the system with a door open or someone in front of a motion detector. This means "Problem" and you need to take care of that zone before you can arm.

To activate the Panic Button: Press the # and * button simultaneously. The siren will begin sounding and we will automatically dispatch the police. Central Station does not call your location to ask for the password. Therefore if you have accidentally tripped the panic you must call them and give the password.

To activate the silent duress feature: One Source Security has entered a two-digit code as your duress code. If you need to activate the duress, disarm the system starting with your two-digit duress code followed by your normal code.

Example. If your normal code which arms and disarms the system is 4345, and your duress two digit code is 66, you would enter 664345 to disarm the system.

After entering this, the system will disarm as normal and you will see no difference. The alarm panel will send a code to central station and they will dispatch the police on a silent signal. As with the panic button, they will not call back to the location and ask for the password.

To activate the door chime: The front door is usually programmed to also act as a door chime. If you would like to use it, just press and hold the number 5 button on the keypad until it beeps. This turns the chime on. To turn the chime off, just press and hold number 5 again until it beeps. The chime sounds for 2 seconds. If you would like it longer, or if you would like a different door(s) to have the chime feature, just give us a call. Pressing and holding the number 5 button just toggles the door chime on and off. The only way to verify if it is on or off is to test it by opening or closing the door.

PHONE NUMBERS:

ONE SOURCE SECURITY: 1-800-570-6478

When the alarm goes off, enter your code to make the siren stop. If it does not stop, wait 5 seconds and try again (repeat as necessary)

Call the central station with your account number and password to avoid dispatch of emergency personnel.

YOUR ACCOUNT NUMBER: _____